

Tank Gauge Software Upgrade

Overview:

When installing and setting up a LevelMaster using a 6400 or 6700 FCU as the host, all software setup and maintenance had to be accomplished using the Console Mode. This .ini file eliminates the need to use the Console Mode by adding tabs to the Entry Screen.

Valid for use in PCCU32 Versions 4.0 and newer. Caution, if you have customized your *fcuentry.ini* file, this file may not work properly. Follow installation instructions carefully to insure that, should the file not work properly, you may restore your original version.

Installation Instructions:

- 1) Download file named *TankGaugefcuentry.ini* directly into your PCCU32 folder as named.
- 2) To save your original *fcuentry.ini* file, locate and rename it as *originalfcuentry.ini*.
- 3) Locate the downloaded file *TankGaugefcuentry.ini* and rename it as *fcuentry.ini*.
- 4) Open the PCCU32 program. The *Entry* screen should now appear as the following figure.

	Description	Value
1	Meter ID	FCU-6410
2	Location	TOTALFLOW TM
3	Contract Hour	00
4	FCU Date/Time(MM/DD/YY hh:mm)	01/23/02 12:16
5	Set FCU with PCCU date/time	No
6	Characteristic Type	Standard
7	Vol. Unit - Flow Rate	MCF - scf/hr
8	--- Commands ---	
9	Reset Volume	No
10	Wakeup	No
11	Reset Log Period	No
12	Set site code	0.0000
13	--- Security setup ---	
14	Security Switch Status	OFF
15	Security Code level 1	
16	Security Code level 2	

Un-Install Instructions:

- 1) Should it be necessary to un-install this .ini file, simply rename the *fcuentry.ini* file to it's original name, *TankGaugefcuentry.ini* file.
- 2) Rename the original file, *originalfcuentry.ini* to *fcuentry.ini*.
- 3) Contact your Totalflow Customer Service Representative to enquire whether your *fcuentry.ini* may be updated to include the Tank Gauge screens.